


Take these few measurements and include them with your request: you will receive a more accurate quote, faster. No stress, **final measurements are always retaken together during the free in-home consultation.**


Before you start

- Use a rigid metal tape measure, not a sewing tape.
- Write everything in inches or in centimetres, never both.
- Measure every window, even if they look identical.
- Do not subtract anything: write the measurements as they are. Nalia calculates fabric fullness and clearances.
- Note any obstacles: radiator, baseboard heater, furniture, handles.
- Take a photo of each window, straight on and from a few steps back.

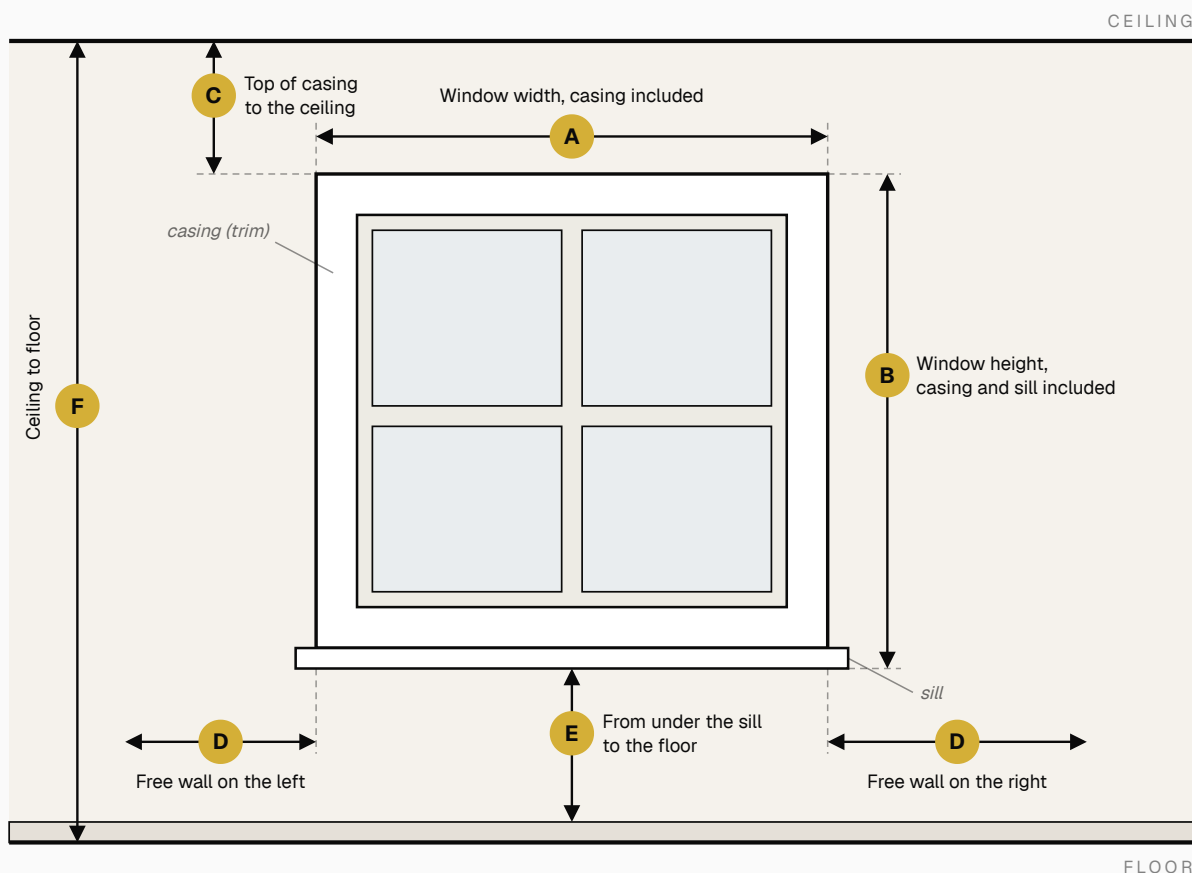


Measure the width (A) and height (B) from one outer edge of the trim to the other. For D, measure the wall space available between the casing and the corner, furniture, or the next window.


Which curtain length?

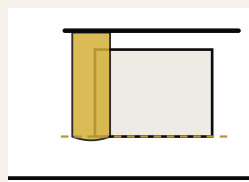

To the sill
clears the radiator

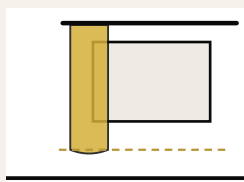

Below the sill
6 to 8 inches lower

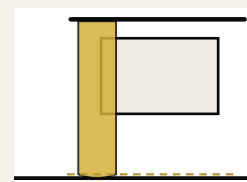

To the floor
the classic, elegant

